

SHURflo

VALVE ASSEMBLY KIT


MODEL 2088/2090

Cat.#PMP-S12-P01

NOTE: Before starting work, make certain power to pump is off. Release liquid pressure on outlet line of pump before performing any maintenance. You may find it easier to remove the pump and work on a bench.

DISASSEMBLY

1. Disconnect lead wires (A), from pressure switch (B). Note which wire goes to each lead on the switch.
2. Remove the strain relief plug (C) by pushing out on plug from the motor side with a flat blade screwdriver. Pull the lead wires through the strain relief.
3. Remove the upper housing screws and nuts (D).
4. Remove the long screws (E). These screws hold the pump assembly to the motor.
Note: If you work carefully, the lower housing will not separate from the motor assembly.
5. Remove the upper housing (F).
6. Remove the old valve assembly (G) from the upper housing.

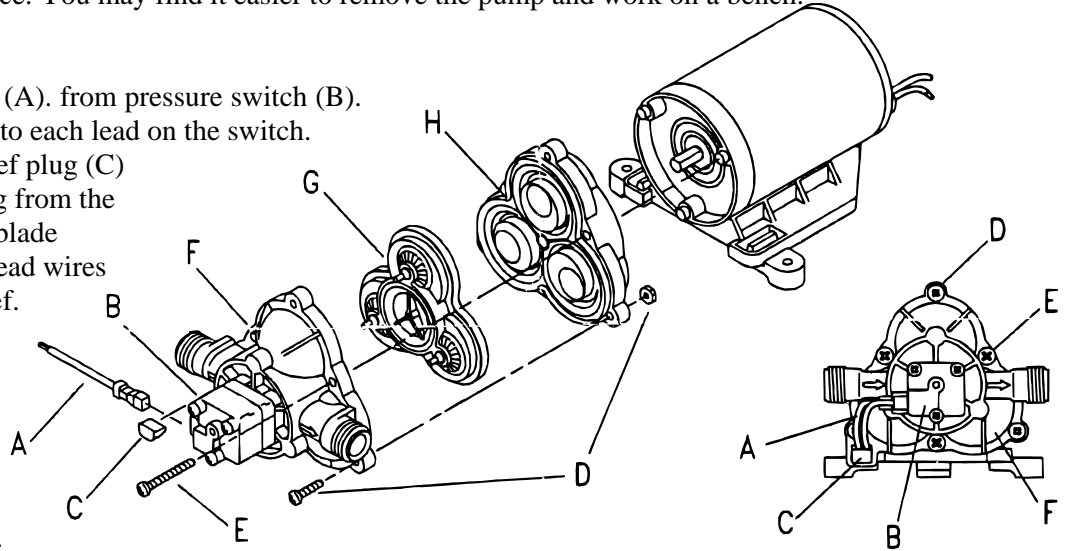

ASSEMBLY

1. Locate the new valve assembly (G) flush with the diaphragm (H) [Align groove in diaphragm with groove in valve assembly].
2. Place the upper housing (F) on top of the new valve assembly (G).
3. Put the three (3) long screws (E) in place and screw down until each touches, then tighten each screw securely.
4. Tighten the three (3) outer screws and nuts (D).
5. Attach the lead wires (A) onto switch.
6. Place strain relief (C) in original position.



RAINBOW POWER COMPANY LTD

A.B.N. 74 003 323 420

1 Alternative Way, Nimbin, NSW 2480, Australia

phone: (02) 6689 1430
international: phone: +61 2 6689 1088
sales@rpc.com.au

fax: (02) 6689 1109
international: fax: +61 2 6689 1109
www.rpc.com.au