

Sundaya Kit Solar Frame Assembly

Assembly instructions for SUN-PV16

1. Attach cross-pieces, and pole-mounting plate:




2. Secure pole mounts to building side, attach panel to mounting pole, align to true north, and tighten locking bolts:



Assembly instructions for SUN-PV50

1. Attach mounting pole to panel bracket:

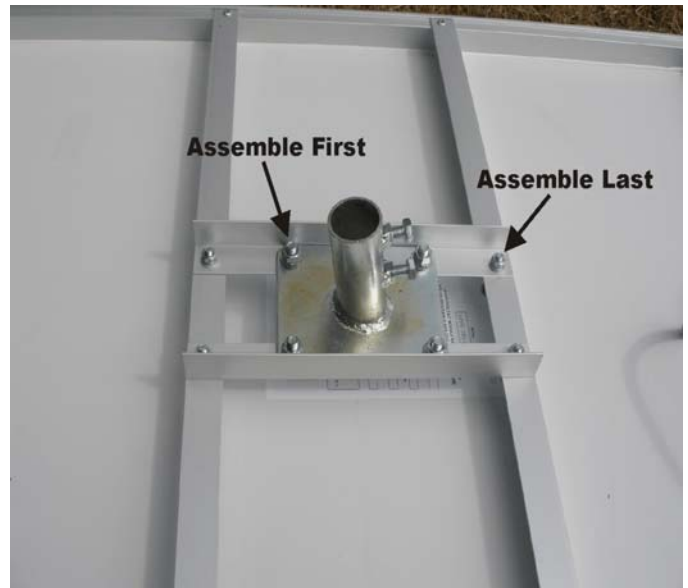

2. Attach pole mounts to the side of building, swivel panel until it is facing true North, and then tighten the locking bolts:



RAINBOW POWER COMPANY LTD

A.B.N. 74 003 323 420

1 Alternative Way, Nimbin, NSW, Australia 2480

phone: (02) 6689 1430

international: phone: +61 2 6689 1088

sales@rpc.com.au

fax: (02) 6689 1109

international: fax: +61 2 6689 1109

www.rpc.com.au